1500474
User's Guide

3-In / 2-Out
HDMI Matrix Selector

We hope you enjoy your HDMI Matrix Selector from RadioShack. Please read this user's guide before using your new selector switch.

Package Contents

- HDMI Matrix Selector
- AC Adapter
- Remote Control
- One 3V, CR2025 Battery
- User's Guide

Features

- Connects three components to two separate HDMI displays
- Enables you to send the same output source to both displays, or a different source to each
- Supports full 1080p resolution for the best possible HD picture and digital sound
- Support 3D format (10 Bit)
- Support 4K resolution (Ultra HD)

Caution: *Only use the supplied AC adapter. Using an adapter that does not meet the selector's specifications could damage the selector.*

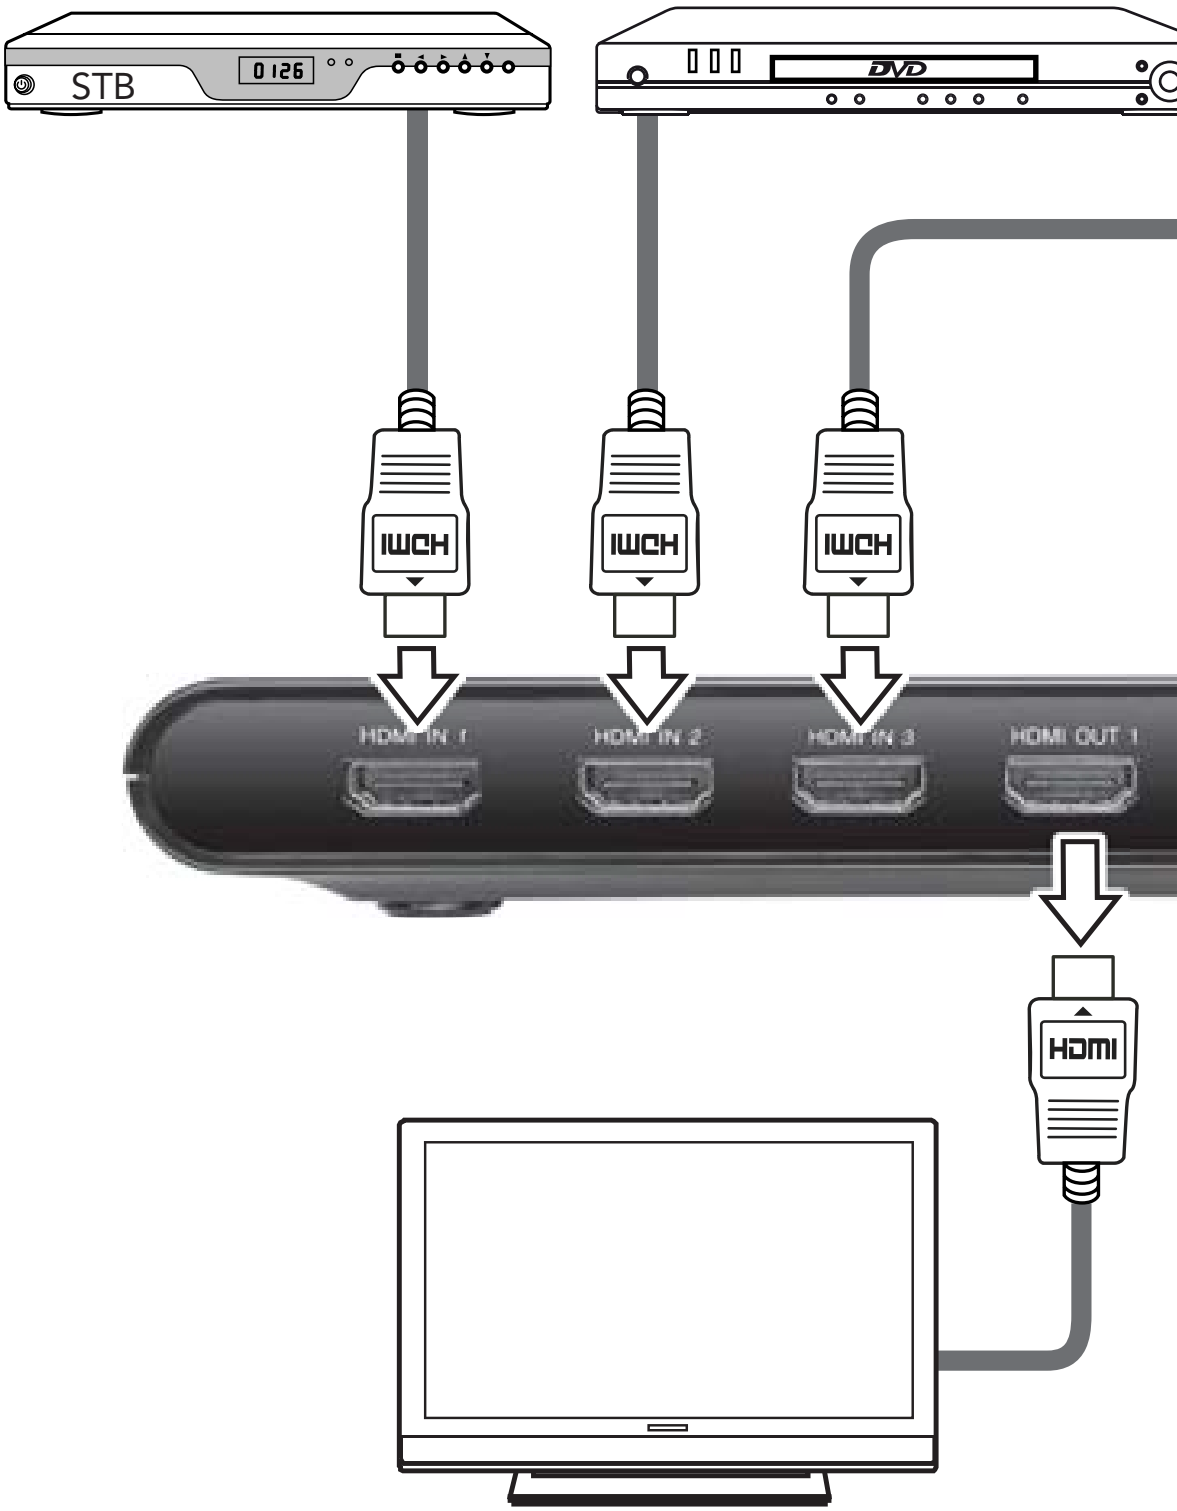
STB
0126
DVD
HDMI IN 1
HDMI IN 2
HDMI IN 3
HDMI OUT 1
HDMI

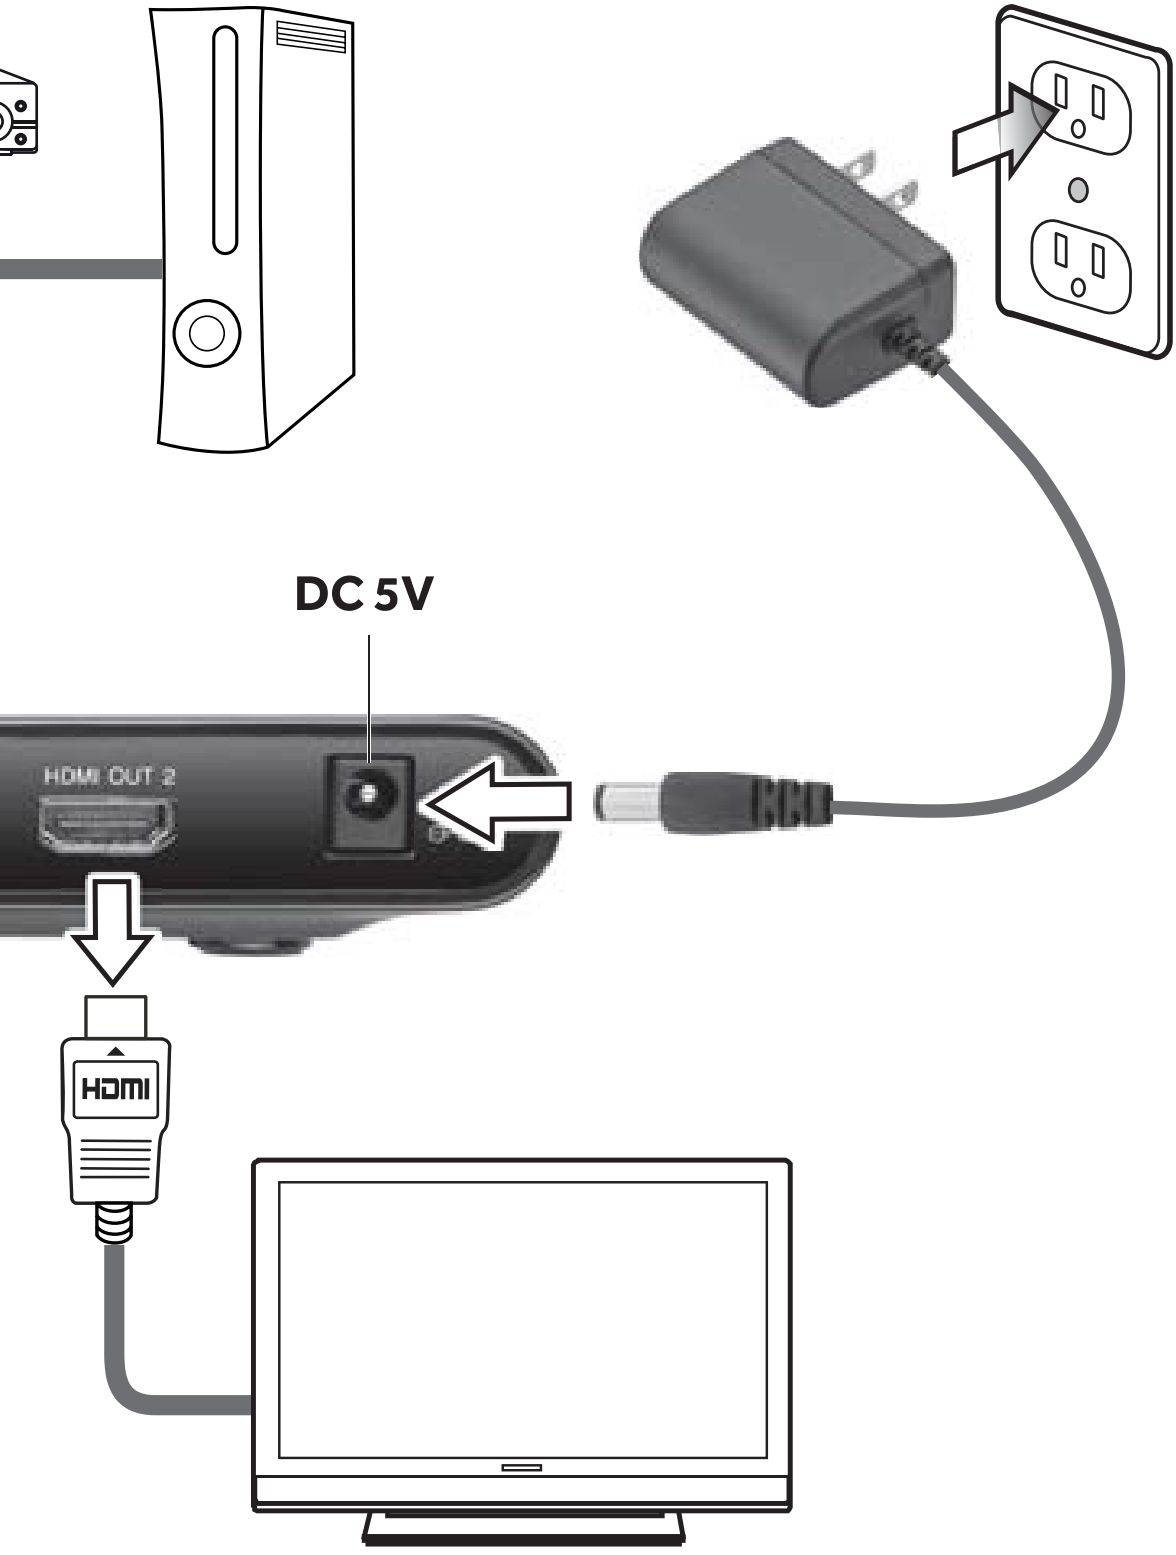
DC 5V
HDMI OUT 2
HDMI

Setup

1. Connect your HD audio/video device to the selector's **HDMI IN1**, **HDMI IN2**, or **HDMI IN3** port using an HDMI cable (not included).
2. Connect your HDTV to the selector's **HDMI OUT1** or **HDMI OUT2** port using an HDMI cable (not included).
3. Plug the provided AC Adapter into the selector's **5V 1A** jack, and then plug it into a standard household outlet.
4. Press ⏻**/SELECT** on the selector to turn it on. The unit scans for input signals. For normal use, it scans from the most recently used source in the sequence of **IN1**, **IN2**, and **IN3**. If no input is connected to a HDMI port, the selector will move to the next port automatically.

⏻/SELECT

- Power
- Select video/ audio device

Lights when video/ audio device is selected

Turn on/off e selector.

Turn on/off the connected video device.

Choose the connected audio device.

Install Battery

1. Press the tab on the battery compartment tray and slide the battery compartment tray out.
2. Insert the supplied 3V, CR2025 battery, positive (+) side up.
3. Slide the tray back into the battery compartment until it clicks.

Battery Notes:

- *Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.*
- *Dispose of batteries promptly and properly. Do not burn or bury them. Use only a fresh battery of the required size and type.*

Use Your Devices

1. To switch between devices, press **IN1**, **IN2**, or **IN3** on the remote control or ⏻**/SELECT** on the selector.
2. To power off the selector, press ⏻ on the remote control or press and hold ⏻**/SELECT** for three seconds on the selector.

Note: *If a new input is selected, the current input signal cuts off. The selector searches the new input and stops the two outputs. The two outputs will recover to display until the selector detects the new signal.*

Troubleshooting

Problem	Possible Solutions
LED doesn't light	• Make sure the power adapter is plugged in. • Check that the A/V device's power cord is plugged in properly.
No video or audio	• Try another device. • Make sure the HDMI cable is not damaged. • Make sure all devices in the signal-chain are HDCP compliant. • Turn off the TV, then turn it back on.
Unable to switch input using the ⏻/ SELECT button	• Make sure nothing is preventing the button from being pressed. • Switch off, unplug, and replug power cord, then switch on again.

Has video but no audio	• Make sure your TV's input is set to HDMI • Make sure your HDMI cable is version 1.1 or higher. • Press ⏻**/SELECT** or **1 – 3** on the remote control to reselect your input source. • If the TV can only support 2-channel audio, change the source device's audio settings to "2-channel (PCM)" output. • Turn off the TV, then turn it back on.
Remote control does not work	• Change the battery. • Make sure there are no obstructions between the remote and switch.
LED is flashing	• LED will flash when the selected input port is empty.

Specifications

Video Amplifier Bandwidth ..... 225 MHz/6.75 Gbps
Vertical Frequency Range .....24 – 60Hz
Single Link Range .....Max. 1080p from source
HDMI Input Connector..... Type A 19-Pin × 3
HDMI Output Connector..... Type A 19-Pin × 2
Switch Source Indicator ..... 6 LEDs
Power Consumption ..... Max. 5W
Power Supply 5V, 1A
Dimensions .....7×3×1.1 in (108×73×28.5mm)
Weight..... 4.8 oz (138.5g)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user

is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. RadioShack MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, altera-

tion, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store in the U.S. RadioShack will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact RadioShack at:

RadioShack Customer Relations
300 RadioShack Circle,
Fort Worth, TX 76102 04/08

www.RadioShack.com

RoHS COMPLIANT

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

©2013 RadioShack Corporation.
All rights reserved. RadioShack is a registered trademark used by RadioShack Corporation.

Printed in China 11A13 1500474